



PRO**ACTIV®**

PED-E



PED-E



Pedal assistance

up to 25 km/h



Motor

Neodrives hub motor Z15
250 W | 12 / 40 Nm | Weight 4.6 kg
Features: recuperation, push assistance



Rechargeable battery

Neodrives Z15
37 V | 16 Ah | 587 Wh | Weight 3.8 kg



Running wheel sizes

16" | 18" | 20"



Frame height



Gear shift

Shimano derailleur gears



Brakes

Hydraulic Shimano disc brakes




Suspension

The PED-E - a successful result of the experience gained and synergies between the various mobility divisions of PRO ACTIV. It is characterised by an individual frame geometry for the requirements of people with short stature. In addition to 20" bikes, we also offer 18" and 16" bikes. This means we cover a range from approx. 90 cm to 145 cm in height. The cables are routed internally in the frame, which emphasises the straightforward design of the bike.



The smoothly starting and powerful Neodrives motor provides valuable support when setting off with its purely electric pushing aid.

As the user, you can make settings and call up riding information conveniently and safely via the control satellite without taking your hand off the handlebar grip.

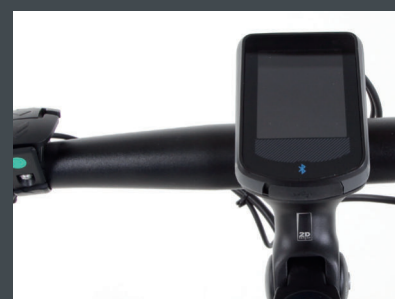

With the help of our configuration options, the PED-E can be equipped with high-quality, selected components and customised to your personal requirements.

All information is subject to design changes, technical modifications, printing errors and colour deviations.

Rev. 03/2025

PRO ACTIV e-Bike-Center

Im Hofstätt 13
D-72359 Dotternhausen
Tel +49 (0) 74 27 94 80-0
www.proactiv-gmbh.com